

SLI290 with step motor, parameters setting

At first, please format the data by following steps.

Press "menu" it will display following data:



Press "ok"




Press "ok"

SL1290 with step motor, parameters setting



Press "ok" to "keyData format."

SL1290 with step motor, parameters setting

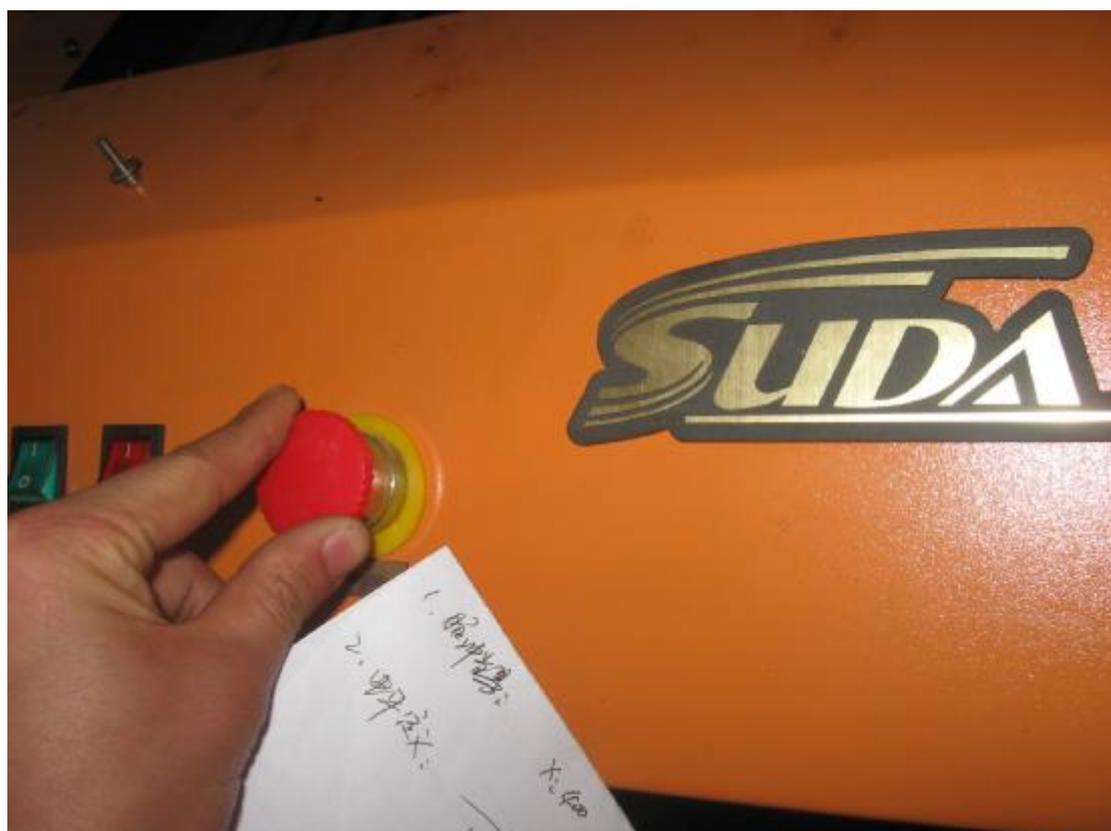

Stop the laser machine for a while, and start the laser machine again.

After starting the machine, please set "function config" of the machine. Should do as that in the video, those functions should be canceled, please see the video: function configure operation after


SLI290 with step motor, parameters setting

data formatting.

After setting "function config", please reset all parameters of the laser machine as following:




SL1290 with step motor, parameters setting

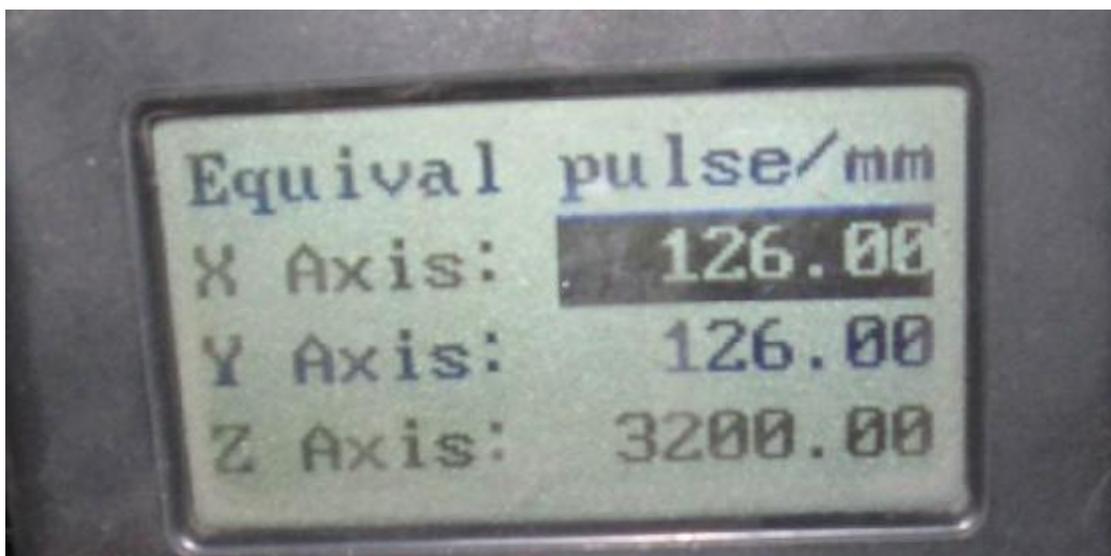


SLI290 with step motor, parameters setting



SL1290 with step motor, parameters setting

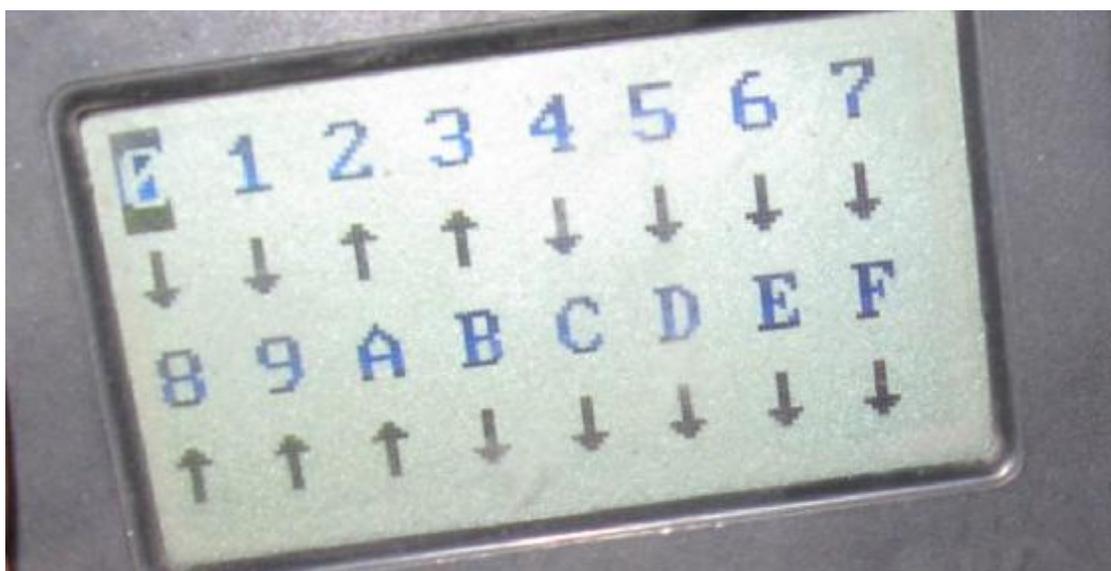

SL1290 with step motor, parameters setting

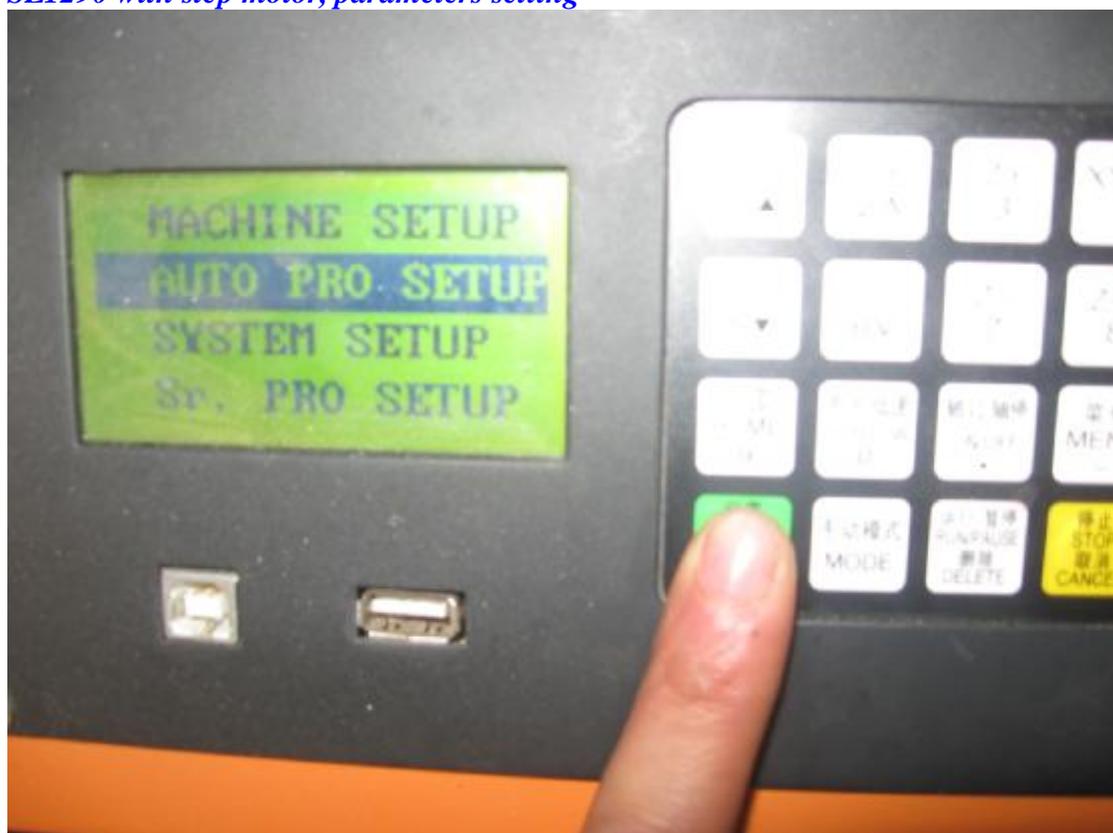

SL1290 with step motor, parameters setting



Then all parameters have been set, now you can close the laser machine, start it again, and run the file.