

RZNC-05 Series

Control Handle

Spindle Setup

Mob:+86-13581806922 <u>Http://www.richnc.com</u> E-mail:richnc@hotmail.com

RZNC-05 Inverter Connect —

Contact:Jery E-mail:richnc@hotmail.com



Contact:Jery E-mail:richnc@hotmail.com

1.Select the "machine setup" in "menu" and press the "ok" key



2. Select the "Spindle setup" press the "ok" key



3. The DSP will show you this



4. press "ok" key to save and next

5. Setup the state when the spindle is off, press the "ok" to save and next



6. Setup the state of 1 st speed, press the "ok" to save and next For example: press the y-/y+ changes arrow form "down" to "up"



7. press the "ok" to save and cancel

Remark:

pls make sure cancel the "menu" after spindle setup to save your done.